


PRX800

S E R I E S




QUICKSTART GUIDE


UNBOX IT

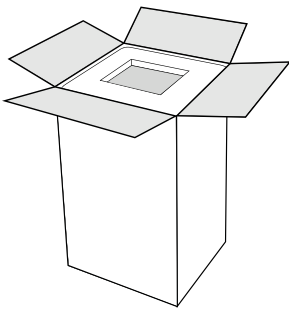

1

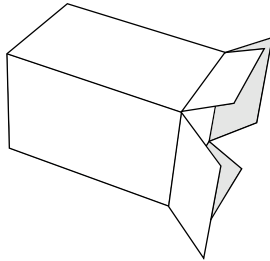


2

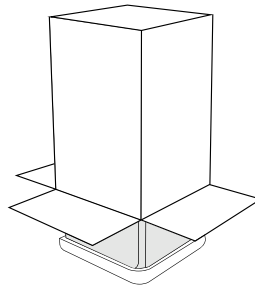


3

1. Open the top of the box.
2. Lay box on its side.
3. Turn box upside down, then lift box up to reveal speaker.


OPTIONAL SETUPS

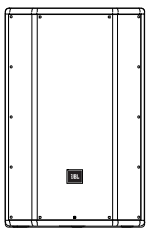


1

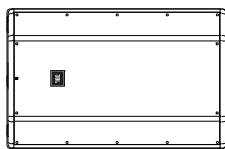


2

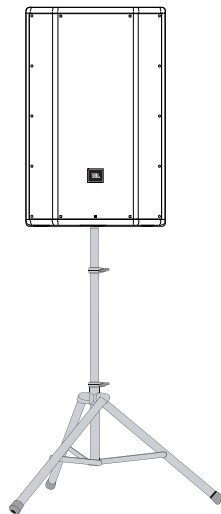


3

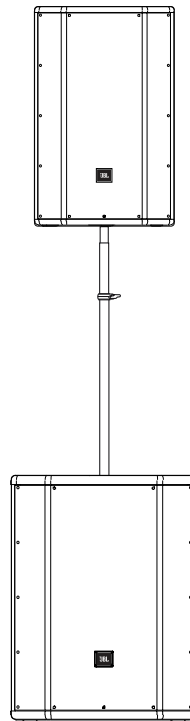

4

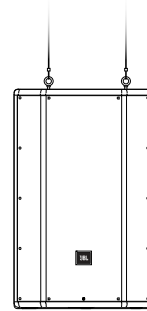

5

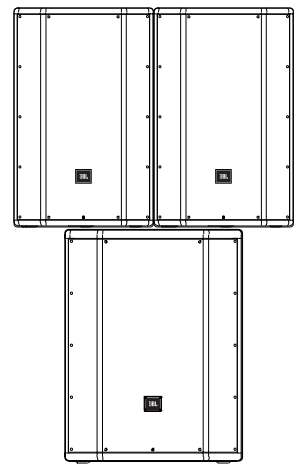


6

1. Floor Standing
2. Monitor
3. Pole Mounted


4. Sub Mounted
5. Suspended
6. Subs with 3-way played

BACK PANEL

PRX812 / PRX815 / PRX825 / PRX835

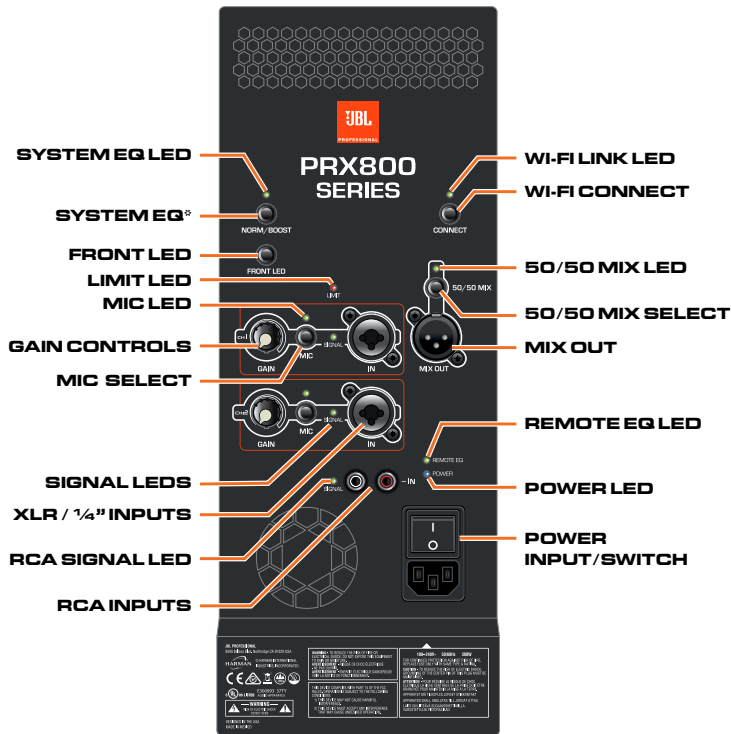

POWER IT ON

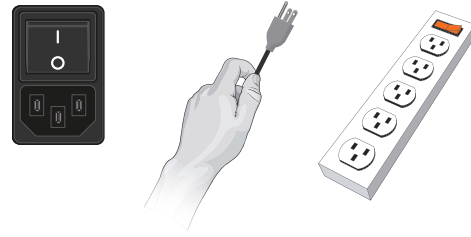

1. Connect the supplied power cord to the IEC inlet on the rear of the speaker.
2. Connect the power cord to an available power outlet.
3. Press the Power switch. The LED power light will turn blue when powered.

PLUG IN THE INPUTS

1. Turn the Gain control knobs all the way to the left. It's a good idea to turn the inputs down all the way before plugging in.
2. Connect XLR or TRS cable from audio source to the inputs.

SET OUTPUT LEVEL


1. Set the gain level for each input using the Gain controls.

WI-FI CONTROL

1. This device allows for additional control and configuration features via a WI-FI application.

Please visit www.jblpro.com for the application and instructions.

PRX815XLF / PRX818XLF

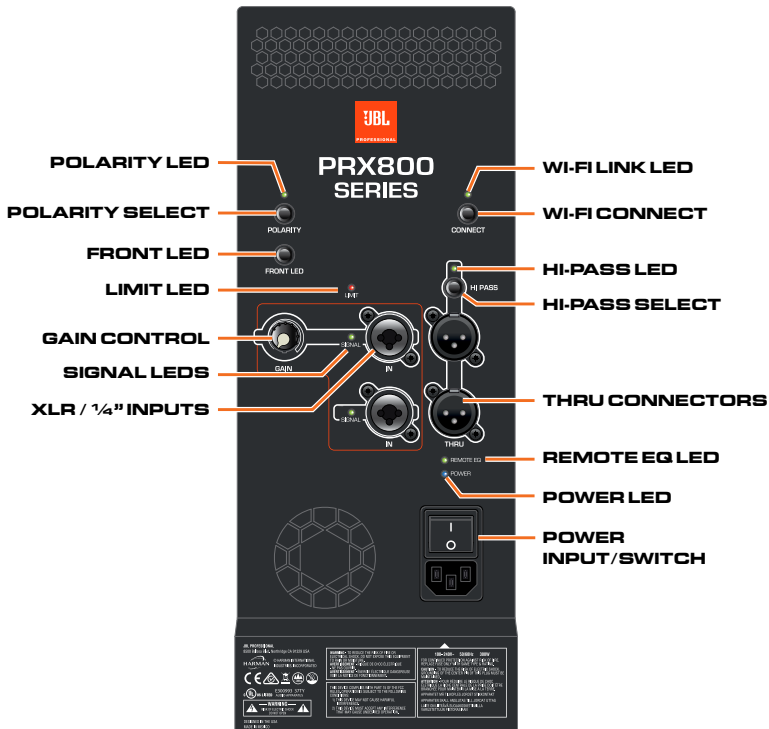

Please visit jblpro.com for complete documentation.

JBL Professional 8500 Balboa Blvd. Northridge, CA 91329 USA © 2017 HARMAN International Industries, Incorporated

PART NUMBER: 5069055-B